



J-15R

15 CHANNEL RECEIVER

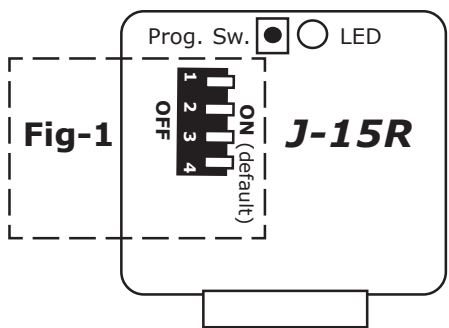

CONNECTOR PINOUT

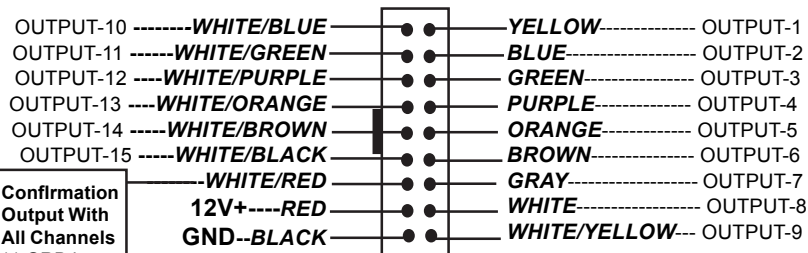

Confirmation Output With All Channels (-) GRD low current pulse to drive a beeper, etc.

CHANNEL 1~8 ALWAYS PULSE

CHANNEL 9~15 PROGRAMMING MODE

Fg.1	BANK 1-2 Channel 9-12		Fg.1	BANK 3-4 Channel 13-15	
1	OFF	Ch 9-12 PULSE	3	OFF	Ch 13-15 PULSE
2	OFF		4	OFF	
1	ON	Ch 9-10 LATCH Ch 11-12 PULSE	3	ON	Ch 13-14 PULSE Ch 15 LATCH
2	OFF		4	OFF	
1	OFF	Ch 9-10 TIMED 15 sec Ch 11-12 PULSE	3	OFF	Ch 13-14 TIMED 15 sec Ch 15 PULSE
2	ON		4	ON	
1	ON	Ch 9-10 TIMED 30 sec Ch 11-12 PULSE	3	ON	Ch 13-14 TIMED 30 sec Ch 15 PULSE
2	ON		4	ON	



Function side button
Pressing Momentarily
Will Shift to Next
Function Group

Remote functions

- Button # 1 = Channel # 1
- Button # 2 = Channel # 2
- Button # 3 = Channel # 3
- Button # 4 = Channel # 4

Remote functions with side button pressed ONE time

- Button # 1 = Channel # 5
- Button # 2 = Channel # 6
- Button # 3 = Channel # 7
- Button # 4 = Channel # 8

Remote functions with side button pressed TWO times

- Button # 1 = Channel # 9
- Button # 2 = Channel # 10
- Button # 3 = Channel # 11
- Button # 4 = Channel # 12

Remote functions with side button pressed THREE times

- Button # 1 = Channel # 13
- Button # 2 = Channel # 14
- Button # 3 = Channel # 15
- Button # 4 = Not Used

Programming Transmitters

Press onboard programming switch 5 Times. The LED will flash 5 times, then press button # 1 on the remote transmitter one time. The LED flashes once. If you want to teach another transmitter, press button # 1 one time on the second transmitter and the LED flashes once. You can teach 4 different transmitters to the J-15R.